



Austuff Anti-Flap Kit Instructions

Thank you for choosing the Austuff Anti Flap Kit. This kit is designed to provide long-lasting protection and ensure a secure, flap-free experience. Let's get started with the easy-to-follow instructions to help you get the most out of your new product!



Contents:

- 1x Anti Flap Bar Kit
- 8x Black Knobs
- 2x Silver Adjusters with bushes
- 4x Rivets
- 2x Saddles
- 2x Rectangular screw in plates
- 1x Storage Bag



Optional Extras:

- Canvas Wall Kit (3x walls)
- 4x Adjustable Poles


Step 1

Install supplied saddles at either end of the awning, 40mm from the top to the centre of hole.



rivets


Step 2

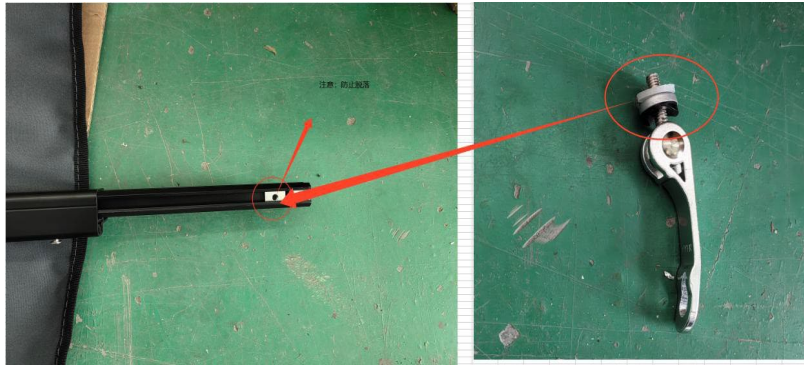

Slide rectangular screw plate into the AFK extension shaft. Screw in the Silver Adjusters with the bushes but only lightly, so it can be adjusted later on.

Step 3

Slide the second half of the Anti Flap Bar into the first half and adjust the tightener to desired setting.

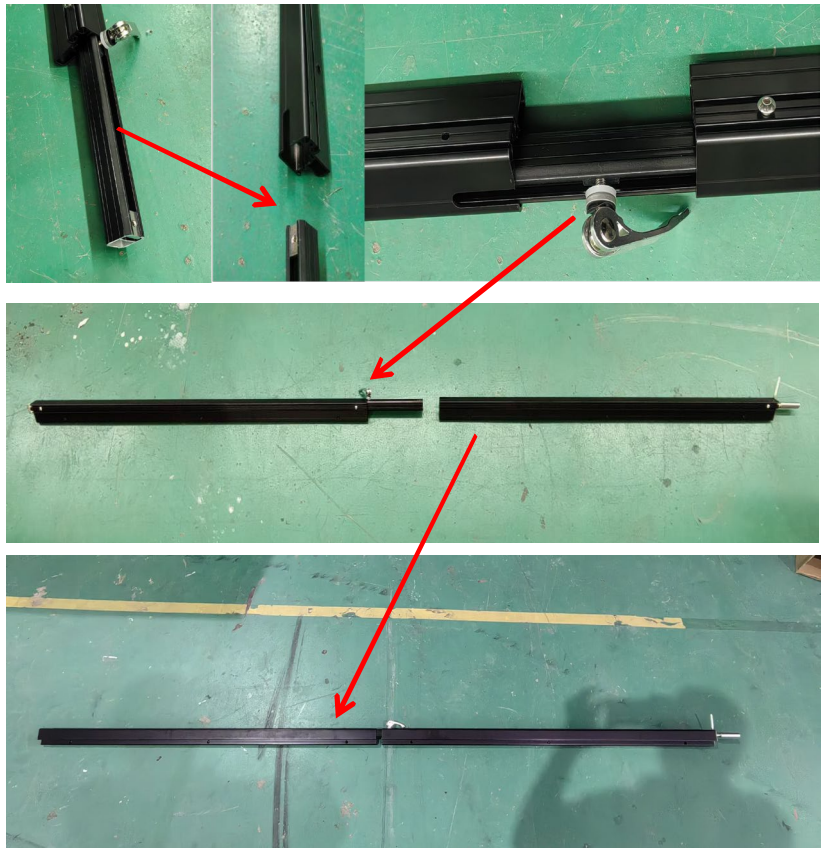

Step 4




Fit the black tightening knobs into the available screw holes, but keep them loose so the flap plate can be removed and adjusted later on.



Step 5

Install Anti Flap Kit onto the awning by sliding the saddle in first, and then placing the spring loaded barrel over the top of the awning leg knuckle. Spread Bars apart firmly, ensuring it is sitting tightly and then adjust silver tightener.



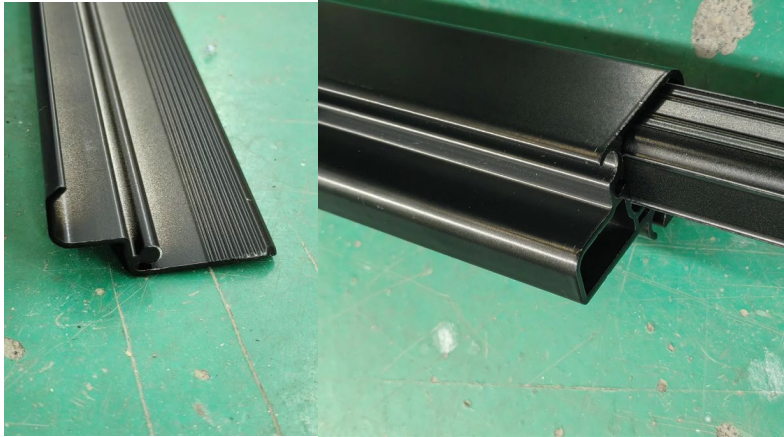

Step 6

Remove Flap Plate and fit over awning canvas while refitting back into the track on the Anti Flap Kit. Clamp down tightly and then fasten the black knobs.



Fasten
Knobs

Congratulations, you have successfully installed the AusTuff Anti Flap Kit.
Happy Camping!